



**Iso-Power**

## **Технические характеристики**

**По вопросам продаж и поддержки обращайтесь:**

Архангельск (8182)63-90-72	Калининград (4012)72-03-81	Нижний Новгород (831)429-08-12	Смоленск (4812)29-41-54
Астана +7(7172)727-132	Калуга (4842)92-23-67	Новокузнецк (3843)20-46-81	Сочи (862)225-72-31
Белгород (4722)40-23-64	Кемерово (3842)65-04-62	Новосибирск (383)227-86-73	Ставрополь (8652)20-65-13
Брянск (4832)59-03-52	Киров (8332)68-02-04	Орел (4862)44-53-42	Тверь (4822)63-31-35
Владивосток (423)249-28-31	Краснодар (861)203-40-90	Оренбург (3532)37-68-04	Томск (3822)98-41-53
Волгоград (844)278-03-48	Красноярск (391)204-63-61	Пенза (8412)22-31-16	Тула (4872)74-02-29
Вологда (8172)26-41-59	Курск (4712)77-13-04	Пермь (342)205-81-47	Тюмень (3452)66-21-18
Воронеж (473)204-51-73	Липецк (4742)52-20-81	Ростов-на-Дону (863)308-18-15	Ульяновск (8422)24-23-59
Екатеринбург (343)384-55-89	Магнитогорск (3519)55-03-13	Рязань (4912)46-61-64	Уфа (347)229-48-12
Иваново (4932)77-34-06	Москва (495)268-04-70	Самара (846)206-03-16	Челябинск (351)202-03-61
Ижевск (3412)26-03-58	Мурманск (8152)59-64-93	Санкт-Петербург (812)309-46-40	Череповец (8202)49-02-64
Казань (843)206-01-48	Набережные Челны (8552)20-53-41	Саратов (845)249-38-78	Ярославль (4852)69-52-93

сайт: [www.mjk.nt-rt.ru](http://www.mjk.nt-rt.ru) || эл. почта: [mkj@nt-rt.ru](mailto:mkj@nt-rt.ru)

# Iso-Power Isolation Amplifiers

## To separate and protect

### General

 
Iso-Power isolation amplifiers are used for galvanic separation of measuring circuits and power supply for 2-wire and 3-wire transmitters.

### Features

Iso-Power is supplied in two versions; *Panel* for DIN rail mounting and *Field* for local mounting. Additionally, the Field version can be equipped with a display for local indication. On both versions it is possible to adjust both zero / span and also the damping of the output signal.

Iso-Power isolation amplifiers are used for galvanic separation of electrical measuring systems, and supplies the measuring circuit loop power at the same time, thus saving a separate power supply. Iso-Power isolation amplifiers can be used to:

- Avoid short circuit between measuring circuits.
- Eliminate coupling of potentials from liquids, amplifiers and PLC's, which can cause disturbances on analytic measurements for pH, redox and conductivity.
- Ease fault finding because a galvanic isolation will isolate the wiring problems.
- Reduce or eliminate damages caused by overvoltage limiting instrument damage.
- Reduce interference caused by electric noise. Iso-Power has adjustable damping

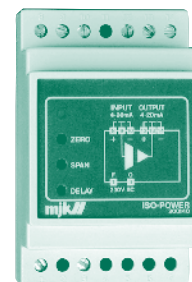

Iso-Power Panel for DIN-rail mounting



Iso-Power Field for local mounting




Iso-Power Field for local mounting equipped with type 531 display insert (option)

### Specifications

 
Part number:	200135	200136	209140
Mounting:	Local	Local	DIN rail
Supply:	15 - 35 V DC	15 - 35 V DC	115 V AC, 50-60 Hz
Load:	120 mA	120 mA	-
Output signal:	3-wire 4-20 mA, 2- or 3-wire, max. 500 Ω		
Input signal:	4-20 mA, 2-wire or 3-wire		
External supply:	15 V DC, 80 mA max.		
Air filter:	No	Yes	-
Temperature range:	-5 ... +140 °F		
Material:	Makrolon	Makrolon	Lexan/Noryl
Enclosure:	NEMA 4X	NEMA 4X	NEMA 1
CE approvals:	EN50081-1, EN50082-1		
Display insert:	See data sheet 6.3 for specifications		
Accessories:	Type 532 loop-supplied display for panel mounting, Type 531 display insert for Iso-Power Field, Type 533 115 V AC display w. 24 V DC transmitter supply (panel mounting),		part no. 200121 part no. 200126 part no. 200131

Dimensions

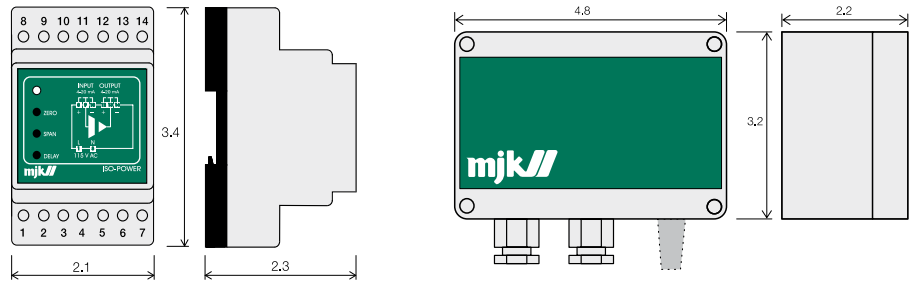


Connections

 
Iso-Power Panel

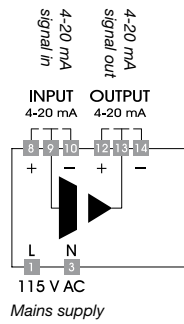

Iso-Power Field

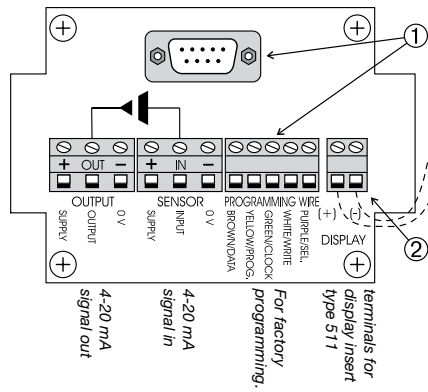 


Type 531 display insert (option)

 


- ① Programming plug and terminals only on part no. 200136.
- ② Red wire to '+', Black wire to '-', REMEMBER TO CUT THE JUMPER!

Application examples

 
Supply and connection of Shuttle® level sensor via Iso-Power Panel to frequency converter

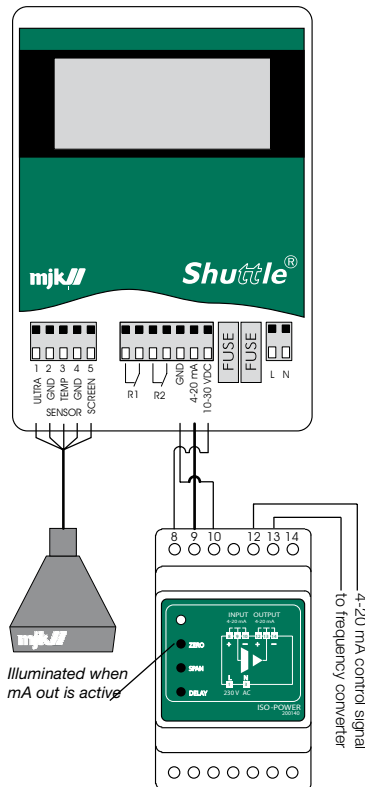

 Connection of pressure transmitter to PLC via Iso-Power Field

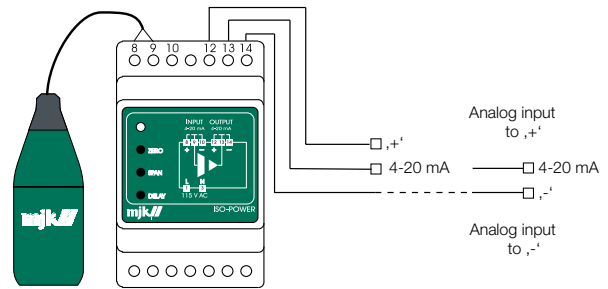

 Connection of pressure transmitter via ISO-POWER Field to 704 P pump controller

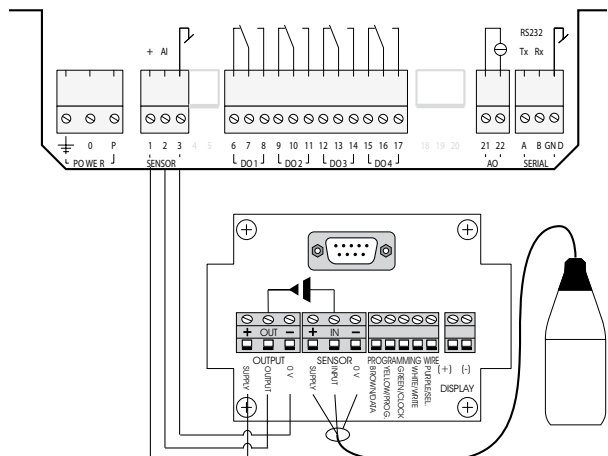



По вопросам продаж и поддержки обращайтесь:

Архангельск (8182)63-90-72	Калининград (4012)72-03-81	Нижний Новгород (831)429-08-12	Смоленск (4812)29-41-54
Астана +7(7172)727-132	Калуга (4842)92-23-67	Новокузнецк (3843)20-46-81	Сочи (862)225-72-31
Белгород (4722)40-23-64	Кемерово (3842)65-04-62	Новосибирск (383)227-86-73	Ставрополь (8652)20-65-13
Брянск (4832)59-03-52	Киров (8332)68-02-04	Орел (4862)44-53-42	Тверь (4822)63-31-35
Владивосток (423)249-28-31	Краснодар (861)203-40-90	Оренбург (3532)37-68-04	Томск (3822)98-41-53
Волгоград (844)278-03-48	Красноярск (391)204-63-61	Пенза (8412)22-31-16	Тула (4872)74-02-29
Вологда (8172)26-41-59	Курск (4712)77-13-04	Пермь (342)205-81-47	Тюмень (3452)66-21-18
Воронеж (473)204-51-73	Липецк (4742)52-20-81	Ростов-на-Дону (863)308-18-15	Ульяновск (8422)24-23-59
Екатеринбург (343)384-55-89	Магнитогорск (3519)55-03-13	Рязань (4912)46-61-64	Уфа (347)229-48-12
Иваново (4932)77-34-06	Москва (495)268-04-70	Самара (846)206-03-16	Челябинск (351)202-03-61
Ижевск (3412)26-03-58	Мурманск (8152)59-64-93	Санкт-Петербург (812)309-46-40	Череповец (8202)49-02-64
Казань (843)206-01-48	Набережные Челны (8552)20-53-41	Саратов (845)249-38-78	Ярославль (4852)69-52-93

сайт: [www.mjk.nt-rt.ru](http://www.mjk.nt-rt.ru) || эл. почта: [mkj@nt-rt.ru](mailto:mkj@nt-rt.ru)